

Line-interactive UPS PowerWalker VI 1200-3000 RLE User Manual

IMPORTANT SAFETY INSTRUCTIONS

(SAVE THESE INSTRUCTIONS)

This manual contains important safety instructions. Please read and follow all instructions carefully during installation and operation of the unit. Read this manual thoroughly before attempting to unpack, install, or operate your UPS.

CAUTION! To prevent the risk of fire or electric shock, install in a temperature and humidity controlled indoor area free of conductive contaminants. (See the specifications for the acceptable temperature and humidity range.)

CAUTION! To reduce the risk of overheating the UPS, do not cover the UPS' cooling vents and avoid exposing the unit to direct sunlight or installing the unit near heat emitting appliances such as space heaters or furnaces.

CAUTION! Do not attach non-computer-related items, such as medical equipment, life-support equipment, microwave ovens, or vacuum cleaners to UPS.

CAUTION! Do not plug the UPS input into its own output.

CAUTION! Do not allow liquids or any foreign object to enter the UPS. Do not place beverages or any other liquid-containing vessels on or near the unit.

CAUTION! In the event of an emergency, press the OFF button and disconnect the power cord from the AC power supply to properly disable the UPS.

CAUTION! Do not attach a power strip or surge suppressor to the UPS.

CAUTION! Unplug the UPS prior to cleaning and do not use liquid or spray detergent.

INSTALLING YOUR UPS SYSTEM

UNPACKING

The box should contain the following:

(1) UPS Unit x 1; (2) User Manual x 1; (3) USB Cable x 1; (4) RS232 Cable x 1;

HOW TO DETERMINE THE POWER REQUIREMENTS OF YOUR EQUIPMENT

1. Ensure that the equipment plugged into the battery power-supplied outlets does not exceed the UPS unit's rated capacity. If rated unit capacities are exceeded, an overload condition may occur and cause the UPS unit to shut down or the fuse blow.
2. There are many factors that can affect the amount of power that your computer system will require. For optimal system performance keep the load below 80% of the unit's rated capacity.

HARDWARE INSTALLATION GUIDE

1. Your new UPS may be used immediately upon receipt. However, recharging the battery for at least 8 hours is recommended to ensure that the battery's maximum charge capacity is achieved. Charge loss may occur during shipping and storage. To recharge the battery, simply leave the unit plugged into an AC outlet. The unit will charge in both the on and off position.
2. With the UPS unit off and unplugged, connect the computer, monitor, and any externally powered data storage device.
3. Plug the UPS into a 2 pole, 3 wire grounded receptacle (wall outlet). Make sure the wall branch outlet is protected by a fuse or circuit breaker and does not service equipment with large electrical demands.
4. Depress the power switch to turn the unit on. The LCD indicator light will illuminate and the unit will "beep".
5. To maintain optimal battery charge, leave the UPS plugged into an AC outlet at all times.
6. To store your UPS for an extended period, cover it and store with the battery fully charged. Recharge the battery every three months to ensure battery life.

ROUTINE MAINTENANCE AND STORAGE

ROUTINE MAINTENANCE


1. Use dry soft clothes to clean the front panel and plastic parts. Do not use any detergent that contains alcoholic ingredient.
2. The expected lifetime of the battery is around 3 years. Improper operation and harsh environment will reduce the actual lifetime.
3. Unplug the UPS from power inlet if the UPS will not operate for long period of time.

STORAGE

1. First turn off your UPS and disconnect its power cord from the wall outlet. Disconnect all cables connected the UPS to avoid battery drain.
2. The UPS should be stored in a cool dry location.
3. Make sure the battery is fully charged before the UPS is stored.
4. For extended storage in moderate climates, the battery should be charged for 12 hours every 3 months by plugging the power cord into the wall receptacle and turning on the main switch. Repeat it every 2 months in high temperature locations.

BASIC OPERATION

FRONT AND BACK PANEL DESCRIPTION

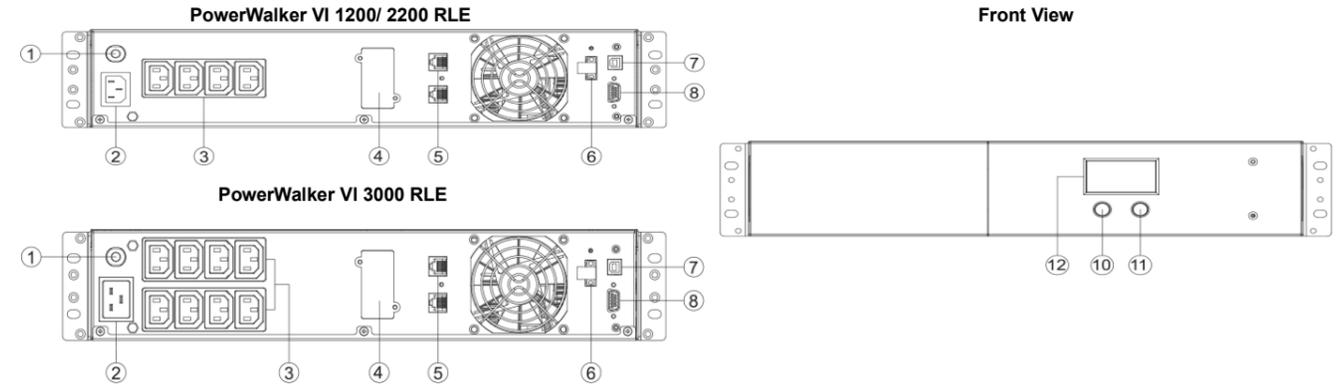

1. **Input Circuit Breaker**
The circuit breaker provides optimal overload protection.
2. **AC Inlet**
Connect to utility power through the input power cord.
3. **AC outlet**
The UPS provides outlets for connected equipment to insure temporary uninterrupted operation during a power failure and against surges and spikes.
4. **SNMP/HTTP Network Port (Slot for optional network card, not included)**
The SNMP/HTTP port provides remote monitoring and management of your UPS over a network.
5. **RJ45/11 Communication Protection Ports**
Communication protection ports will protect any standard modem, fax, telephone line, or network cable.
6. **EPO Port**
Enables an emergency UPS Power-Off from a remote location. EPO terminal open, the UPS will turn off and the output shutdown immediately.
7. **USB Port**
This port allows connection and communication from the USB port on the computer to the UPS unit.
8. **Serial Port**
This port allows connection and communication from the DB9 serial on the computer to the UPS unit. The UPS communicates its status to the software.
9. **Not used**
10. **Power On/Off Switch**
Press the power switch to turn the UPS ON or OFF.
11. **Mute Button**
The audible alarm can be turned off/on by pressing this button.
12. **LCD Display**
The LCD will display the UPS status including input voltage, output voltage, runtime, percentage of load and battery, etc.

SOFTWARE DOWNLOAD

Power Master management software provides a user-friendly interface for your power systems. The graphic user-interface is intuitive and displays essential power information at a glance. Please follow procedure below to install the software.

Installation procedure:

1. Download Power Master from the website:
<http://www.powermaster.powerwalker.com>
2. Double-click the file and follow the installation steps.
3. When your computer restarts, the Power Master software will appear as a blue icon located in the system tray.


System Summary		UPS Status	
UPS	Status	Normal	
Information	Voltage	229.9 V	
Diagnostics	Frequency	49.90 Hz	
Load			
Event Action	Status	Normal, ECO Mode	
Events	Voltage	230.0 V	
Recipient	Frequency	49.90 Hz	
Settings	Load	0 % (0 Watts)	
Logs			
Event Logs			
Status Records			
Settings			
Schedule	Status	Normal, Charging	
Shutdown	Capacity	46 %	

TECHNICAL SPECIFICATIONS


Model	PowerWalker VI 1200 RLE	PowerWalker VI 2200 RLE	PowerWalker VI3000 RLE
Capacity (VA)	1200VA	2200VA	3000VA
Capacity (Watts)	720W	1320W	1800W
Input			
Input Voltage Range	165V~290V		
Frequency Range	50Hz +/- 5 Hz		
Output			
On Battery Output Voltage	Sine Wave at 230Vac +/-10%		
On Battery Output Frequency	50Hz +/-1%		
Overload Protection	On Utility: Fuse, On Battery: Internal Current Limiting		
AVR Function			
Boost Function	Yes		
Buck Function	Yes		
Physical			
Total # of UPS Receptacles	IEC C13 x 4		IEC C13 x 8
Maximum Dimensions (H x D x W)	88mm x 430mm x 438mm		
Weight (Kg)	11.93	16.47	21.78
Battery			
Sealed Maintenance Free Lead Acid Battery	24V (2x12V/7.2Ah)	24V (2x12V/9Ah)	24V (4x12V/7.2Ah)
Typical Recharge Time	4 Hours		
Warning Diagnostics			
Indicators	Using AC / Using Battery / Fault		
Communication			
Software	Yes		
Environmental			
Operating Temperature	0°C to 40°C		
Operating Relative Humidity	0 to 90% NON-CONDENSING		
Management			
Auto-Charger	Yes		
Auto-Restart	Yes		

DEFINITIONS FOR ILLUMINATED LCD INDICATORS

LCD Indication

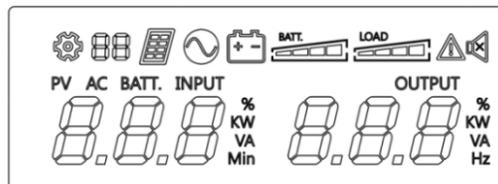

	Line mode		Bat-mode
	Alarm/Fault		Sound disable (Press the mute key 3s to disable and enable the buzzer sound)
	Bat mode: battery capacity Line mode: 1. Battery charging: cycle lighting 2. Battery full charged: lighting 3. Line mode without charger: battery capacity		Load capacity
	Setting Item		PV Mode

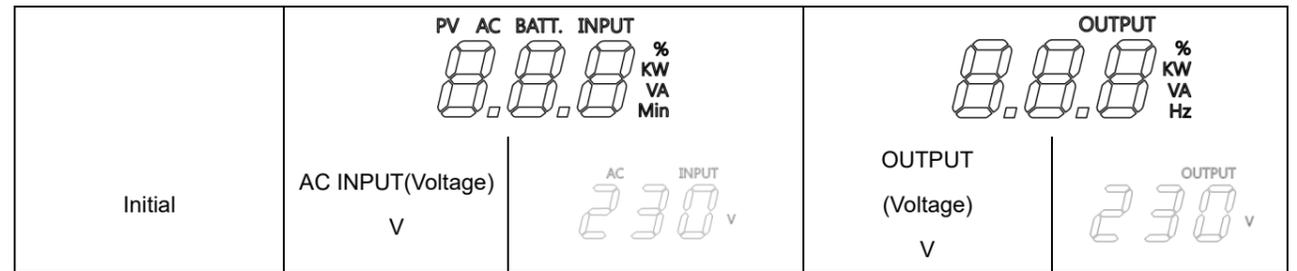

TROUBLE SHOOTING

Problem	Possible Cause	Solution
The UPS does not perform expected runtime.	Batteries are not fully charged.	Recharge the battery by leaving the UPS plugged in.
	Battery is slightly worn out.	Contact Technical Support.
The UPS will not turn on.	The on/off switch is designed to prevent damage by rapidly turning it off and on.	Turn the UPS off. Wait 10 seconds and then turn the UPS on.
	The unit is not connected to an AC outlet.	The unit must be connected to a 220-240V 50Hz outlet.
	The battery is worn out.	Contact Technical Support.
Outlets do not provide power to equipment	Mechanical problem.	Contact Technical Support.
	Fuse is blown due to overload	Turn the UPS off and unplug at least one piece connected equipment. Unplug the power cord of the UPS then remove the fuse compartment beneath the power inlet of the UPS and replace the blown fuse with a spare one. Lock the compartment back to the UPS. Connect power cord then turn the UPS on. Make sure that your spare fuse meets the specification.
	Batteries are discharged	Allow the unit to recharge for at least 4 hours.
Software is inactive	Unit has been damaged by a surge or spike.	Contact Technical Support.
	The network cable is not connected.	Connect the network cable to the UPS unit and a network port on the hub.
	Software setting problem.	Please read and follow NetAgent utility instruction during installation and operation of the NetAgent software, or contact technical support.
Fault		
Fault code F09	Output Short : Output circuit short.	1. Shut down the UPS 2. Your attached equipment may have problems, please remove them and check again.
Fault code F11	Battery high: Battery voltage is too high.	1. Shut down the UPS 2. Check the counts of Battery
Fault code F12	Battery Low : Battery voltage is too low.	1. Shut down the UPS 2. Check the counts of Battery 3. Check battery connector when use battery packages.
Fault code F14	Overload in line Mode: Your equipment requires more power than the UPS can provide. It will transfer to Bypass Mode.	Shut off non-essential equipment. If this solves the overload problem, the UPS will transfer to normal operation.
Fault code F14	Overload in Battery Mode : Your equipment requires more power than the UPS can provide. It will shutdown.	Shut off non-essential equipment. If this solves the overload problem, the UPS will transfer to normal operation.
Fault code F18	Fan fail : Fan has been damaged.	1. Shut down the UPS 2. Replace the fan
Fault code F19	Over Temperature : High ambient temperature The LCD will display E11	1. Shut down the UPS. Restart the UPS to Check the fan for operation and if the ventilation hole has been covered 2. Contact Technical Support.

All rights reserved. Reproduction without permission is prohibited.

